




# Sportwall Junior Playground Quick Start Guide

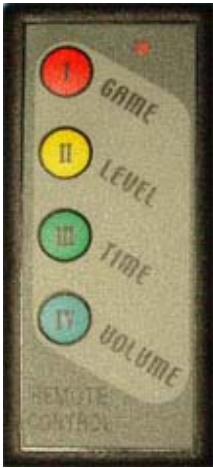

**HOW TO OPERATE THE SPORTWALL JUNIOR PLAYGROUND:** Use the remote control to select settings, pressing the indicated button will sequentially scroll through the choices.

**Game** and **Level** Selection – When pressing these buttons, the ‘Time’ display box will show the selected game and level.

**Time** Selection – 10 to 240 seconds

**Volume** Selection – Mute to very loud (1-8)

*Start* – Locate the switch inside the remote power supply box and turn it to the ‘on’ Position. For the next 3 seconds the system will go through a power-up check routine. **Do not touch the system while this is in progress.** Once the system is ready, the display box will read ‘FUN’.

- For manual reset, select with your level button **0-C**.
- For automatic reset, select **0-A**. Now select your game and have fun.

## 1-5 PLAYERS

### FIND SKIPPY™

Skippy the dog is hiding. Meet his friends by knocking the lights until you find skippy. Once he’s found, find him again. First shot starts the game.

**Game-Level #:** 1-C

### FIND THE PARTY™

Find the party. Search for the party by knocking the light until you find the party. When you find the party, Party! First shot starts the game.

**Game-Level #:** 1-A

### FIND THE PARTY™

Find the party. Search for the party by knocking the light until you find the party. When you find the party, Party! First shot starts the game.

**Game-Level #:** 1-A

### CHASE THE TARGET™

Chase the target, the faster you go the bigger the score, hurry you’re being timed! First shot starts the game.

**Game-Level #:** 2-C (Child Version) – Group of targets  
2-A (Adult Version) – Single target

### LIGHTS OUT™

Knock the lights out. Aim well, points are taken away if you miss the target. Hurry you’re being timed! First shot starts the game.

**Game-Level #:** 3-C (Child Version – Group of targets)  
3-A (Adult Version – Single target)

### PLAY TUNE™

Chase the lights and find the tune. See how far you can get. First shot starts the game.

**Game-Level #:** 4-C (Child Version – Group of targets)  
4-A (Adult Version – Single target)